

2014 - 2021 Toyota Tundra Dash Plate Installation Instructions

(NO SCREWS OR HARDWARE)



Included in this kit are 3 round magnets, 3 machine screws with wing nuts, 3 metal screws and 9 metric screws to be used with the BulletPoint arms purchased separately.



Carefully peel the red plastic away from the adhesive sticker.



With the dash mat removed place the magnet at the top of the three grooves that hold the dash mat in place.



This is the placement of the magnetic and repeat on the other two slots. (Disregard the 3/4" hole in pic. This is drills for hidden cables).



The magnets should look like this minus the screws as seen in this pic.



Attach your BulletPoint Arms (sold separately) and place the plate over the magnets.

ENJOY!!

2014 - 2021 Toyota Tundra Dash Plate Installation Instructions

(METAL SCREWS)



Included in this kit are 3 round magnets, 3 machine screws with wing nuts, 3 metal screws and 9 metric screws to be used with the BulletPoint arms purchased separately.



With a 1/16" drill bit, carefully drill a small hole at the tops of each of the three slot that hold the dash mat in place. **Just drill enough to penetrate the plastic, do not drill the full length of the bit!!**



Place the metal screw in the magnet as seen in this pic.



Line up the screw with the hole you previously drilled.



The magnets should look like this as seen in this pic.



Attach your BulletPoint Arms (sold separately) and place the plate over the magnets.

ENJOY!!

2nd Generation Toyota Tundra Dash Plate Installation Instructions

(MACHINE SCREWS WITH WING NUTS)



Included in this kit are 3 round magnets, 3 machine screws with wing nuts, 3 metal screws and 9 metric screws to be used with the BulletPoint arms purchased separately.



With a 9/64" drill bit, carefully drill a small hole at the tops of each of the three slot that hold the dash mat in place. **Just drill enough to penetrate the plastic, do not drill the full length of the bit!!**



With the machine screw placed inside the magnet line up the screw with the hole you previously drilled.



The magnets should look like this as seen in this pic.


Now it's time to take the radio out to attach the wing nuts to the machine screws.



The following steps will require these tools: 2 plastic pry tools, 10mm socket with extension and a step down bit or 3/4" forstner bit.




Insert a pry tool here above the 12v outlet and gently pull the edge out.

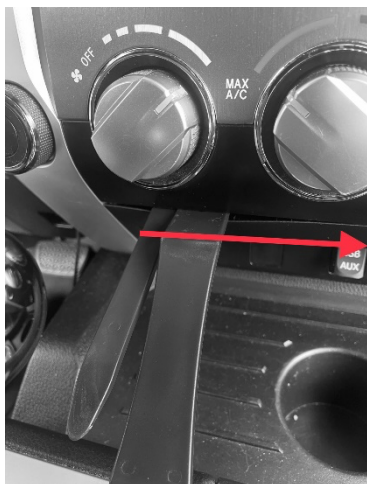

Insert a second pry tool here, working your way to the right.



The panel should then pull straight forward.

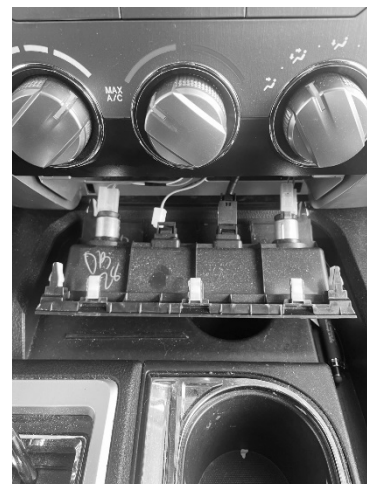


You can now disconnect the cables and move the panel or leave it where it sits.



With your fingers underneath the panel pull the climate control panel straight forward.



Disconnect this cable and remove the climate control panel or let it stay in place.

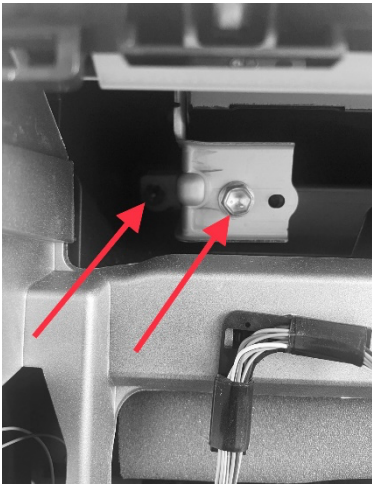

Carefully remove the two 10mm bolts on the left holding the radio.



Carefully remove the two 10mm bolts on the right holding the radio.




After all four bolts have been removed go to the next step.



With your fingers underneath the radio pull the radio straight forward.



With your handle supporting the bottom of the radio, carefully pull it all the way out.

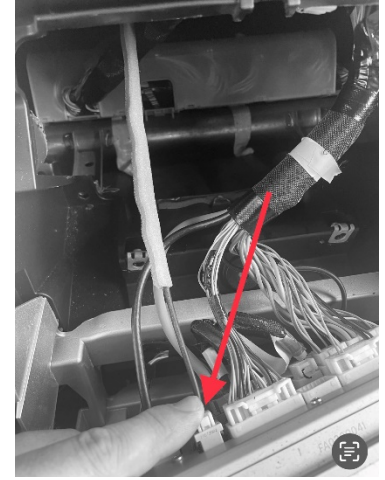

Only disconnect the radio antenna and let the radio rest in place.



Clear away any cables right underneath the dash so they do not get cut or damaged. Now take the three wing nuts and tighten them to the machine screws. Do not over tighten.



If you do not plan on hiding your wires you can now attach your BulletPoint Arms (sold separately) and place the plate over the magnets.
ENJOY!!
If you want to hide your wires, move on to the next step.



Place a paper towel in the void to catch any debris from cutting or drilling.



The next step will require a step down bit or forstner bit.



Make sure the cables are clear underneath the dash so they do not get cut or damaged.



Drill a 3/4" hole in the center of the three divots. All the cable from your devices should fit through this hole.



Be careful not to hit the wiring harness when drilling.



You are now ready to run your wires through the dash as necessary to hide them. When you are finished, reverse the process of removing the radio.



Attach your BulletPoint Arms (sold separately) and place the plate over the magnets.
ENJOY!!